

1



Remove the rubber cover on the lower right side of the driver

2



Switch to the required wattage. Place back the rubber cover.

NOTE:

From Left to Right
30W (700ma), 40W (1050ma) 50W (1400ma)