DECO digital™
lighting systems

Adjustable Driver
Switching Instructions

Digitize *your light.*™

1

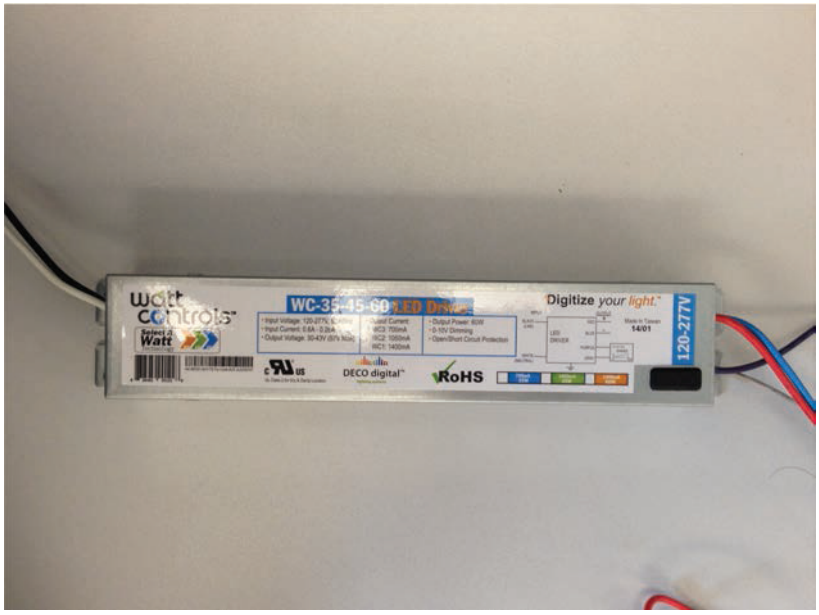

Remove the rubber cover on the lower right side of the driver

2

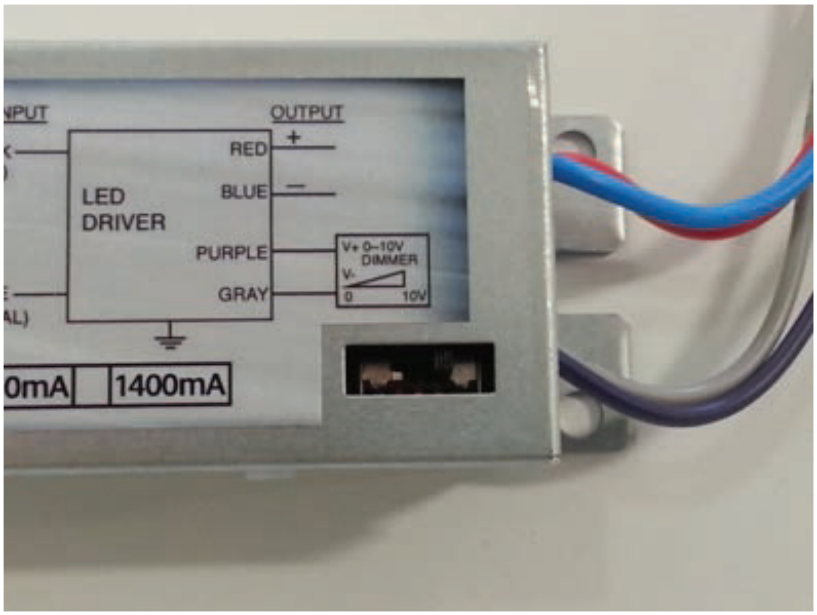

Switch to the required wattage. Place back the rubber cover.

NOTE:

From Left to Right
35W (700ma), 45W (1050ma) 60W (1400ma)